



## Checklist-Spark plug installation

1. Loosen the old spark plug.
2. Before withdrawing the plug remove any debris or loose encrustations from the plug hole with compressed air.
3. Unscrew the old spark plug.
4. Check the condition of the thread in the cylinder head and remove any excessive deposits in the spark plug bore area.
5. Install the spark plug by hand until it seats.
6. Never use spark plugs that have fallen onto a hard surface after removal from packaging as the ceramic insulator may have suffered damage.
7. Set the torque wrench to the correct tightening torque.
8. Ensure that the socket of the torque wrench is fully engaged and parallel to the nut of the spark plug without tilting and then tighten.

